



File Name: bose lifestyle system 5 manual.pdf

Size: 4012 KB

Type: PDF, ePub, eBook

Category: Book

Uploaded: 18 May 2019, 14:44 PM

Rating: 4.6/5 from 578 votes.

Status: AVAILABLE

Last checked: 18 Minutes ago!

In order to read or download bose lifestyle system 5 manual ebook, you need to create a FREE account.

[Download Now!](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with bose lifestyle system 5 manual . To get started finding bose lifestyle system 5 manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



Book Descriptions:

bose lifestyle system 5 manual

Use proper power sources Plug the product into a proper power source, as described in the operating Example of antenna grounding as per National Electrical instructions or as marked on the product. This complete audio system offers superb sound, elegance, technology, and simplicity for music and home entertainment. If any part of the product appears damaged, do not attempt to use the system. Check to be sure it is set for the proper voltage Figure 6. Use 115V for North America;. For additional assistance with connecting other components, see your components manuals. Unwind each antennas wires. Antennas provide better reception when their wires are not bundled. FM antenna AM antenna Figure jack terminals The antenna connections. The CD cover latch opens the CD cover for loading and unloading a CD. SEE Ifd TUNE Note If the system is on and the radio is already selected, this key switches between the AM and FM bands. Connecting headphones automatically shuts off speakers connected to SPEAKERS A and FIXED OUTPUTs. However, your music center also provides connections SPEAKERS B for adding a pair of powered speakers in a second room. In the second room, you can listen to the sound source that is playing in the main room. Then turn it on again. October 22, 2001. Or call Bose directly see inside back cover for phone numbers. In a wet basement. near a swimming pool. or Wider than the other. Do not change Important Safety Instructions No 70 provides information with respect to proper Refer to the antenna Line Sum —To prevent damage to this product A. the power supply cord or the plug has been B. objects have fallen or liquid has spilled into the O. the product has been exposed to rain or water, or B. the product does not appear to operate normally or E. the product has been dropped or the cabinet After any service or Be sure that any replacement parts used have the same Antenna grounding. Example of antenna grounding as per National Electrical. Lead In Wire. Antenna. Discharge Um! <http://anatolianlgs.com/userfiles/communications-cabling-manual-2007.xml>

- **bose lifestyle system 5 manual, bose lifestyle 5 music system manual, bose lifestyle 5 surround sound system manual, bose lifestyle system 5 manual, bose lifestyle system 5 manual pdf, bose lifestyle system 5 manual download, bose lifestyle system 5 manual free, bose lifestyle system 5 manual review.**

WEC smm n m an. Gluund lnn. Cnnducturs Electric. Servrce. Eule Enl Electrode System Note to CATV system installer. This reminder is provided to call the CATV system installers The Mountm. remit gnaw motow rrs USA. Information about products that Part 15 of the FCC Rules These llmls are designed to provide Installation If this equipment does cause harmful interference Owner's Guide Hvaluation Owner's Guide The lightning ilash With arrowhead symbol, within an equilateral triangle, is intended to alert The exclamation point within an equilateral triangle, as marked on the system, is intended to A CAUTION To prevent electric shock, match Wide blade of plug to Wide slot. Class 1 laser product. This compact disc player is classified as a CLASS 1 LASER product. The CLASS 1 LASER PRODUCT label is located on the barium Class B emissions limits. This Class B digital apparatus meets all requirements of the Canadian Interference Causing. Equipment Regulations. Batteries. Please dispose of used batteries properly, following any local regulations. Do not incinerate. Additional safety information. See the additional instructions on the Important Safety information page enclosed with this Please read this owner's guide. Please take the time to follow this owners guide carefully. It will help you set up and operate Save your owners guide for Lifestyle 50 system. Where to find. Setting Up. Before you begin. Unpacking the carton. Connecting your system. Connecting your home theater components to the Lifestyle system. Other connections. Connecting the antennas. Connecting power to your system. Setting up the personal music cente.

Operating Your Lifestyle' 50 System. The personal music center display. Listening to the radio. Listening to compact discs. Listening to home theater sound. Using the system with external components. Operating a Multiroom System. Connecting additional rooms. Operating more than one room. Cleaning the Lifestyle 50 system. Replacing batteries. <http://cosmetic-elit.com/pic/communication-variables-manual-atv312.xml>

Using the personal music center "find me" feature. Troubleshooting. Warranty period. Customer service. Product Introduction. Technical information. Accessories Bose Corporation. For your records. Serial numbers are located on the bottom panels of the personal music center, multiroom Personal music center serial number. Multiroom interlaced serial number. CD changer serial number. Acoustic bass module serial number. Dealer name. We suggest you keep your sales slip and warranty card together with this owners guide. Lifestyle System 3. Thank you for purchasing the Bose Lifestyle" 50 system. Years of research bring you this Technological innovations that make the Lifestyle 50 system unique The personal music center is a clear departure from convention it has no cables. Since the Bose Jewel Cube speakers are also far from the conventional. Proprietary Bose technologies The other elements of the Lifestyle 50 system are designed to be hidden from view DVD, digital TV, next generation cable boxes and satellite receivers. For all analog formats. as Your Lifestyle 50 system is. DVD, digital TV, and digital cable boxes and satellite receivers. VCRs, stereo TVs, cable boxes and satellite receivers. Videostage decoding directs stereo information to the surround channels, so the sound of Videostage decoding delivers live great sounding channels, even when the original These, and numerous other innovations, bring you the Lifestyle 50 system, offering superb Please take the time to follow this owners guide carefully. It will help you set up and operate. Save your owner's guide for Dolby Laboratories Licensing Corporation. Lifestyle 50 system. Unpacking the carton What comes with your. Lifestyle" 50 system Carefully unpack your system. Save all packing materials for possible future use. The Note Find the serial numbers on the bottom panels of the personal music center, multi Then write them on your warranty WARNING The Acoustic bass module weighs 33 pounds 15 kg. Use good lifting.

WARNING To avoid danger of suffocation, keep the plastic bags out of the reach of Personal music center. Rubber feet 4. Acoustic bass module. Rubber feet a" Figure 24. Selecting a station to store. Figure 25. Alter storing a station as You can use the PRESETS MENU to set presets. PRESETS is only available in the MENU list Press the MENU button until PRESETS is displayed. It a number is flashing in the PRESET display indicating that this station has not been preset, Or, select a different station Select the station you want to preset. Then Using the PRESET MENU allows you to do additional preset management, making it easier Any station can be assigned to more than one preset number. Or, you can reserve different number groups for different types of stations. For easy reference Erasing a preset station. To erase a preset station. Select the frequency or preset number In addition, to erase a preset station In locations 1 through 9, you can use quickstore from Note When all 25 FM or 25 AM preset locations are filled, and you hold down the area Operating Your. Figure 26. Loading and ejecting a CD. Figure 27. Loading and unloading the CD Using the CD changer. You can load up to six compact discs at a time. Loading discs into the CD magazine. Hold the magazine, looking at the side with the arrow. Insert up to six discs, label side up Note the slot numbers 1 through 6, CAUTION Do not insert more than one also into any slot Forcing two discs into one slot CD changer. Note If a disc is upside down, it does not play The display shows the disc number. Ejecting discs from the CD magazine. Press the white lever that corresponds to the disc you want to eject. This ejects the disc far Loading the CD magazine into the CD changer. Open the CD changer door. Insert the CD magazine fully into the CD changer, following the Ejecting the CD magazine from the CD changer. Press the EJECT button, at the lower left of the magazine slot, to remove the magazine Eject button. Lifestyle System 25. Operating Your Lifestyle.

Figure 28. The CD display Turning the system on and choosing the CD player. Press the CD button to

turn the system on and select the CD player. CD appears in the source display area. It a CD The CD display provides information In three main areas, each with left and right arrow Pause a CD PAUSE II and II ashes. Pause changes to stop after 10 minutes. Unpause a CD PAUSE II, PLAY b, STOP I, CD, or OFF. Stop a CD STOP I. After pressing STOP I, the display briefly shows the total time. Go to next track TRACK display right arrow button. Skipping to the next track wraps from the last track back to the rst of the current disc. You can skip tracks while paused. Go to beginning of current track TRACK display left arrow button. Go to previous track TRACK display left arrow button twice. In RANDOM mode, skips to previous track played. Skipping back from the rst track Play another disc DISC display left or right arrow button. In PLAY mode, selects the next or previous disc; in RANDOM mode, randomly selects Scanning up or down stops at the ends at the disc. You can scan a CD while paused. Note To prevent excessive wear on the CD mechanism, unattended CD play or random To leave music playing unattended for longer The personal music center display provides the following information about the CD changer Lifestyle so system. To prevent a track from playing, press the OMIT TRACK button. The track is skipped and is Including omitted tracks. Omitted tracks are indicated by OMITTED next to the right TRACK arrow. OMITTED I c INCLUDED. Display showing an omitted Track 8 is Use to cancel. OMITTED OMUTED Display showing omitted lack I D omit hack 8 Limryis 50 system 27. Using the CD OPTIONS MENU. Press the MENU button until CD OPTIONS is displayed. CD options screen while CD is up, EH 8 Wms a "a CD programming repeat options. Random and Nepal modes. Repeat modes allow you to play CDs for 24 hours or until you select STOP I or OFE Press. DONE to accept your settlngs.

By selecting CD LIST rst the following random and repeat options play your programmed. CD list the same way they play a disc J" Note. If you select random and repeat modes that cannot be combined REPEAT TRACK Opera ng Your Lifestyle" 50 System. CD Programming Vou can edit a CD In the CD OPTIONS MENU Figure 31, press EDIT CD LIST to begin creating your CD play. Iisl. Flynn 32. Beginning CD programming Ready for rst To add The track and disc numbers Figure 33. CLEAR and CLEAR LIST age Repeat selecting disc and track numbers The display offers dashes for the track L flesryfe SO system 29. Opera 9 Your Lifestyle 50 System. Figure 34. Ready to play CD LIST The item number begins ashing PLAY list play. Press the CD LIST button to play your CD list. CD, it is skipped while the list plays. To erase the entire list, press the CLEAR LIST button in the CD OPTIONS MENU, and conrm Lifestyle 50 system. Listening to home theater sound Built In Dolby Digital AC3 decoding delivers Dialogue remains locked on screen. Listening to digital sound. Turning the digitli audio source on. Turn on the DVD player, digital TV. Be sure to load the DVD disc Turning the system on and choosing digital sound. Press AUX on the personal music center to turn your system on to play digital sound. Sei octing listening material. To select material with compatible digital audio bll streams, look for the terms POM or Dolby. Digital, or the symbols ml or. on DVD Video discs. Your Lifestyle" 50 system cannot. To select surround encoded analog or digital audio material, look for the terms Surround or. Ing a TV broadcast. You can listen to any program material in SURROUND 5 speaker mode, although you may Some monaural and stereo matenals will Even with surround encoded Operating Your Lifestyle 50 System. Speaker Dplions and center and Figure 35. VIDEO 1 with FILM BASS Press the MENU button until SPEAKERS is displayed. The SPEAKERS MENU allows you to Select lny number a! speaker Adjusting center and surround levels.

The center and surround adjustments are remembered for the room in which they were used. The levels are factory preset at zero. Use the arrow buttons to adjust the levels. Using film bass for movie soundtracks. While using AUX, VIDEO 1, VIDEO 2, and TAPE, you can select lm bass, an enhanced bass Press FILM BASS to turn You can turn it on for Operating Your Lifestyle" 50 System. Figure 37. The RECORD OUT MENU Follow the instmctions on page 15 for connecting components. Turn on your component directly or by using its remote control. Use VOLUME A or V on your Note The Lifestyle 50 system cannot tum a connected component on or off. Turning the system on and selecting the component. Press VIDEO 1, VIDEO 2, AUX, or TAPE on your personal muslc center to

Press HOUSE to see empty Figure 43. Pressing the HOUSE button with Figure 44. Pressing the HOUSE button and. FM in your room system. J” More Press the HOUSE button before each different command to apply that command to all The only MENU items available while in HOUSE mode are CLEAN SCREEN and CD 0. TIONS CD programming. Pressing HOUSE and a source turns all rooms on in this source. The display shows the empty Pressing HOUSE and VOLUME changes the volume of all rooms that are on. When you The system adjusts the Pressing HOUSE and MUTE mutes all rooms that were on.

Any rooms that were The individual rooms Pressing HOUSE and SLEEP applies the SLEEP mode to all rooms that were on. Pressing HOUSE displays empty boxes for all connected rooms. Pressing SLEEP shows all The SLEEP time selected applies to all the rooms that were on even if they were playing You can accept this time or Change It for all the rooms. SLEEP, CLEAR, and DONE. Note You can set different sleep times for individual rooms by using the ROOM button to Regardless of how many rooms are on. Canceling HOUSE mode. If you do not press any additional buttons after pressing HOUSE, pressing HOUSE again Unlinking room. After you have linked the rooms using the HOUSE button or by selecting the group of rooms This room is now removed from the linked group. Using more than one personal music center. To operate a multiroom system, you may want to add personal music centers In the add To add a new personal music center to your system, follow the setup instructions on page 17. Be sure to Install the batteries and turn it on for the first time within three feet of the multi—Lifestyle Sa system 39. Cleaning the Lifestyle 50 system. Figure 45. Entering the CLEAN SCREEN Figure 45. Handling %. Figure 47. Cleaning a CD For information on replacing the personal music center batteries see page 17. Cleaning the touchscreen Press the MENU button until CLEAN SCREEN is displayed. Press the DISABLE KEYS button Press DONE to exit from CLEAN SCREEN or press. MENU to select another menu item. You can use an ammonia-free window cleaner on a soft cloth to wipe the screen. Handling CDs. Handle discs by their edges to prevent fingerprints and scratches Figure 46. To remove stains or fingerprints from the surface of a disc. use a soft, lint-free, dry cloth. Wipe Do not use any Do not write on, or attach labels to the surface of the disc. To minimize exposure to dust and dirt, replace discs in their cases after use. Store each disc Cleaning the CD changer. Use only a soft cloth to clean the outside of the CD changer.

Do not use any solvents, chemicals, or cleaning solutions containing alcohol, ammonia, or Do not use any sprays near the Cleaning the speakers and Acoustimass module. Clean the surface of your speakers with a soft, damp cloth. You can use an ammonia-free Do not use any sprays near the system. Do not use any solvents, chemicals. The speaker grille panels require no special care. CAUTION If liquids get into the product, turn the system off and allow it to air dry. Then turn Lifestyle so system. There are five successive levels of warnings to alert you to replace the personal music center Figure 48. The most severe low battery See page 17 for Using the personal music center “find me” feature. Press the LOCATE. CONTROLLER button on the back of the multiroom interface under the antenna connector The personal music center begins beeping You can stop the beep by touching Figure 49. The LOCATE CONTROLLER LOCATE CONTROLLER button. Lifestyle system 41. Problem. System does not function What to do This allows the AUDIO INPUT jack. Make sure to select the correct No sound from Too much sound No sound from Surround speakers Personal music center See pages 17 and 39. Then turn on the personal music Problem. CD does not play. Radio does not work. FM sound is distorted. Sound is distorted. No tape, CD, VCR, Warranty period. What to do Display shows need if no Clean the CD. See Figure 46. Call Bose Product Support see inside Use SIGNAL LEVELS MENU to determine Please fill out the For additional help in solving problems. contact Bose customer service. See the inside back Lifestyle system 43 Technical information. Accessories Multiroom interface Europe 230V 50 Hz 19VA. Australia 240V 50 Hz 19VA. Mattison interface inputs. TAPE 2Vrms, maximum. AUX, VIDEO 1, VIDEO 2 2Vrms, maximum. FM antenna 750. AM antenna 12uH. Multiroom interface outputs. TAPE video audio. ROOM A, B, C, D autoadjusting fixed or SERIAL DATA for future use. ROOM connector pinouts Personal

music centerDimensions.

Personal music centerMultiroom interfaceCD changerJewel Cube speakerAcoustimass moduleWeights. Personal music centerMultiroom interfaceCD changerJewel Cube speakerAcoustimass moduleTotal shipping weightFinish. Personal music center. Polymer, painted. Multiroom interface. Polymer. CD changer. Aluminum. Jewel Cube speakers. Polymer. painted. Acoustimass module. Vinyl veneer, Polymer. To find out about mounting brackets, stands, CD magazines, and connecting additional. Bose powered loudspeakers, contact your Bose dealer. Or call Bose directly see insideLifestyle so system. Lifestyle so systemFramingham, MA 017019168Weekdays 9 am. to 5 pm. Saturdays 9 am. to 3 p.m. Canada. Bose Ltd., 835 East Beaver Creek Road. Richmond Hill, Ontario L4H 1R3. Phone hours ET eastern time. Weekdays 9 am, to 5 pm. European Office. Bose B.V. Nijverheidstraat 8Panama, Panama, Panama 2150Bose GmbH, MaxPlanckStrasse 366. D-13811 FriedrichsdorfBose SA, 6, rue Saint VincentBose Corporation India Private Limited. W-110016, Greater Kailash I, New Delhi 110 048Bose Corporation . Cambridge, Massachusetts, Co MonaghanBose KAK., Shibuya Y BuildingShibuya-ku, Tokyo 150Bose BM, Nijverheidstraat 8Bose AIS, Solheimsgate 11.